

MICROH DJ
www.microhdj.com



USER MANUAL
FOG ZOOM 1000

Keep this manual for future reference.

1. INTRODUCTION AND UNPACKING

Thank you for purchasing the MICROH FOG ZOOM 1000 fogger. For your own safety and knowledge, please read this manual before installing or operating the device. This manual covers the important information on installation and applications. Please install and operate the fixture according to instructions. Meanwhile, please keep this manual for future reference.

The MICROH FOG ZOOM 1000 fogger is manufactured following CSA standards, complying with international standard DMX512 protocol. This fixture is applicable but not limited to large-scale live performances, theater, studio, nightclubs and discos.

Please carefully unpack it when you receive the fogger and check if it was damaged during the transportation. Please check whether the following items are included inside the box:

Fixture – One Power Cord – One User Manual – One
Wireless Remote – One

2. SAFETY INSTRUCTIONS



Safety Notes Read all the following Safety Notes before working with this product. These notes include important information about the installation, usage, and maintenance of this product. This product contains no user-serviceable parts. Any reference to servicing in this User Manual will only apply to properly trained *MICROH* certified technicians. Do not open the housing or attempt any repairs.

All applicable local codes and regulations apply to proper installation of this product.

Personal Safety

- Always disconnect this product from its power source before servicing.
- Always connect this product to a grounded circuit to avoid the risk of electrocution.
- Do not touch this product's housing during operation because it may be very hot.
- Do not drink or become in contact with the fog fluid. If you do, call your local emergency service (911 in the CDA/US) for help.
- Mount this product in a location with adequate ventilation, at least 20 in (50 cm) from adjacent surfaces.
- Make sure there are no flammable materials close to this product while it is operating.
- When hanging this product, always secure to a fastening device using a safety cable (not included).

Power and Wiring

- Make sure the power cord is not crimped or damaged.
- Always make sure you are connecting this product to the proper voltage in accordance with the specifications in this manual or on the product's specification label.
- Never connect this product to a dimmer pack or rheostat.
- Never disconnect this product by pulling or tugging on the power cable.

Operation

- Do not operate this product if you see damage to the housing, fluid tank, or cables. Have the damaged parts replaced by an authorized technician at once.
- Be sure that no ventilation slots on the product's housing are blocked.
- The fog exits the nozzle at a very high temperature. Keep a minimum distance of 6.5ft (2 m) from the nozzle to the nearest object.
- The product's nozzle is very hot during operation and it remains hot for a long time after operation has stopped.
- The maximum ambient temperature is 104 °F (40 °C). Do not operate this product at a higher temperature.
- In the event of a serious operating problem, stop using this product immediately!
- Do not add perfume, alcohol, gasoline, or any other flammables to the fog fluid.
- Operates best with *MICROH's* 'MAXIMUM' water-based High Density Fog Fluid (HDF).



CAUTION!

Never touch the device during operation!
The housing may heat up



CAUTION!

The electric connection must only be carried out by a qualified electrician.

 
 
3. MOUNTING AND INSTALLATION

Caution: For added protection, mount the fixtures in areas outside walking paths, seating areas, or in areas where the fixture might be reached by unauthorized personnel. Before mounting the fixture to any surface, make sure that the installation area can hold a minimum point load of 10 times the device's weight. Fixture installation must always be secured with a secondary safety attachment, such as an appropriate safety cable. Never stand directly below the device when mounting, removing, or servicing the fixture.


Whether installing on a flat level surface (see illustration below). Be sure this fixture is kept at least 0.5m (1.5 ft.) away from any flammable materials (decoration etc.). Always use and install the supplied safety cable as a safety measure to prevent accidental damage and/or injury in the event the clamp fails.

4. DMX-512 CONTROL CONNECTIONS

This fixture complies with international USITT DMX standards and can be used with either a 3 pin or 5pin DMX connector. Plug in the provided 3pin XLR cable to the female 3pin XLR output of your controller and the other side to the male 3pin XLR input of the MICROH FOG HORN 1200DMX. To connect the units to DMX, you must daisy chain the fixtures together as referred in the diagram below. Always end your DMX-512 connection with a DMX terminator.

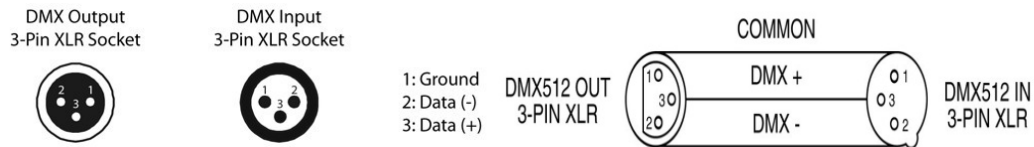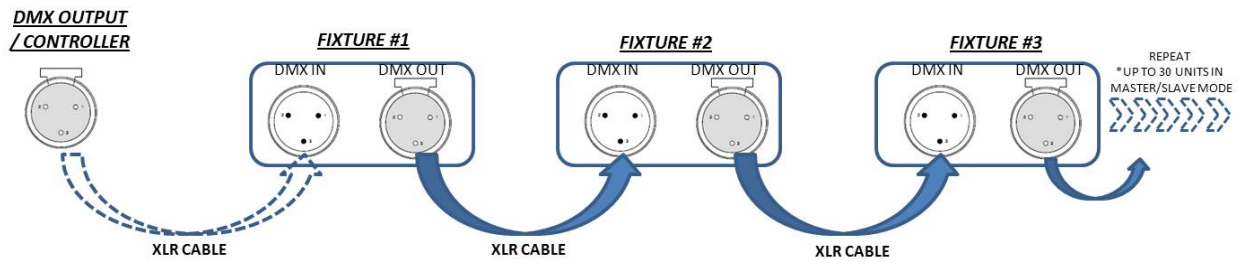

For installations where the DMX cable has to run a long distance, or is in an electrically noisy environment, it is recommended to use a DMX terminator. This helps in preventing corruption of the digital control signal by electrical noise. The DMX terminator is simply an XLR plug with a 120 Ω resistor connected between pins 2 and 3, which is then plugged into the output XLR socket of the last fixture in the chain. Please see illustrations below.

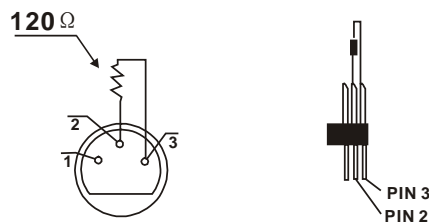 

5. SETUP

Be sure the unit is unplugged from the power source, remove the cap from the tank, and add the 'MAXIMUM' fog fluid up to fluid fill line. Be sure to not over fill the tank. Replace the cap and plug unit in.

Turn the power switch on; you will notice the tank lights up RED. Once the unit is ready for use, the illuminated tank will change to BLUE. Heat-up will take 3-5 minutes.

REMOTE

The FOG ZOOM 1000 can be operated manually.

TIMER / MANUAL REMOTE

The FOG ZOOM 1000 can be operated manually, or with the included timer remote control.

- When the GREEN LED lights up the unit is ready for operation. Press the GREEN button to manually fog
- To engage CONTINUOUS FOGGING press the RED toggle switch. The RED LED will light up indicating that the CONTINUOUS FOGGING is 'ON'. To disengage, press the RED toggle switch once again. The RED LED will extinguish.
- To engage the TIMER, press the YELLOW toggle switch. The YELLOW LED will light up indicating that the TIMER is 'ON'. Adjust the 3 dials to set your INTERVAL, DURATION and OUTPUT. To disengage, press the YELLOW toggle switch once again. The YELLOW LED will extinguish.



6. TECHNICAL SPECIFICATIONS

Heat up Time: 2-3 Mins
Tank Capacity: 1.25L
Spraying Distance: 4-6m
Output: 4165 cu.ff/min
Voltage: 110V AC 60Hz
Power: 950W
Weight: 15 Lbs

7. MAINTENANCE AND CLEANING

The following points have to be considered during the inspection:

- 1) All screws for installing the device or parts of the device must be tightly connected, and must not be corroded.

- 2) There must not be any deformations on the housing, colour lenses, fixations or installation spots (ceiling, suspension, trussing).
- 3) Mechanically moved parts must not show any traces of wearing and must not rotate with unbalances.
- 4) The electric power supply cables must not show any damage, material fatigue or sediments.

Further instructions depending on the installation spot and usage must be handled by a skilled installer or technician. Any safety issues must be resolved.



In order to keep the fixture in good condition and extend the life, we suggest regular cleaning to the fixture.

- 1) Clean the inside and outside lens each week to avoid the light output from darkening due to accumulation of dust, dirt, etc.
- 2) Clean the fan each week.
- 3) A detailed electrical check by approved technician every three months is advised. Ensure the circuit contacts are in good condition.

We recommend a frequent cleaning of the device. Please use a moist, lint- free cloth. Never use alcohol or solvents.

There are no serviceable parts inside the device. Please refer to the instructions under "Installation instructions".

Should you need any spare parts, please order genuine MICROH parts from your local dealer.

IF YOU SHOULD EXPERIENCE ANY PROBLEMS OR ISSUES PLEASE CONTACT MICROH PROFESSIONAL PRODUCTS BY EMAIL AT info@microhdj.com

In the event that your unit is defective in any way, please contact your local dealer to obtain an RA number for service repair.

Disclaimer: MICROH believes that the information contained in this manual is accurate in all respects. However, MICROH assumes no responsibility for any errors or omissions in this document. MICROH reserves the right to revise and make changes to the content of this document without obligation that MICROH notify any person or company of such revision or changes. This does not in any way constitute a commitment by MICROH to make such changes. MICROH may issue a revision of this manual or a new edition to incorporate such changes.

Notes:

MICROH 

www.microhdj.com